


INSTALLING YOUR ROMAN BLINDS



It's as easy as 1-2-*Me*

Parts Included

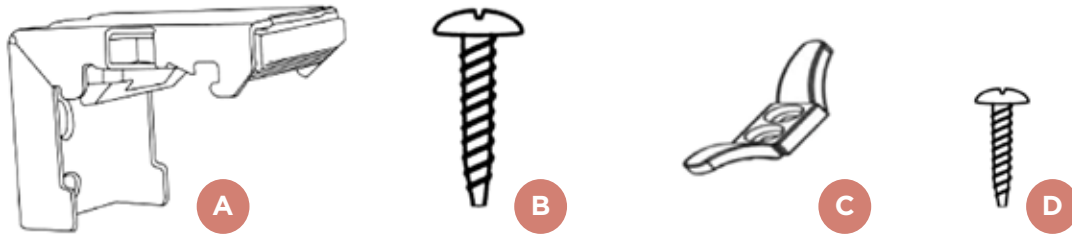

Note: Please be aware that the mounting bracket quantity supplied will depend on the width of the blind.

Important Notes

- Please check that all parts and hardware have been supplied before you begin to install your new Custom Roman Blind.
- Do not raise/lower the blind until it is fully installed.
- The finished blind width is the length of the headrail.
- Ensure that the blind is installed level for correct operation.

Positioning Blind

As per your order, determine the correct fitting location of the mounting brackets and mark where you are going to install the brackets.

- Inside the window frame (Recess) or;
- On the window frame or wall (Face)


Installing Mounting Brackets

RECESS MOUNT

The Installation Brackets (part A) are fixed directly to the mounting surface, spaced evenly. Make sure all brackets are in a straight line so the headrail will attach easily.


FACE MOUNT

The Installation Brackets (part A) are mounted directly to the architrave or wall and spaced evenly. Make sure all brackets are level. The brackets should not be installed at the very end of the headrail.

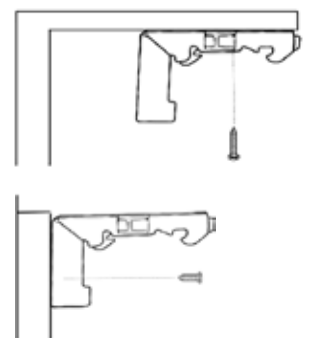

Attaching Roman Blind to Bracket

Position the front edge of the headrail into the front hooks of the installation bracket and gently push upwards and the track will 'snap' into position. To remove the blind, press the release button on the front of the installation bracket (part A) and disengage the headrail from the brackets.

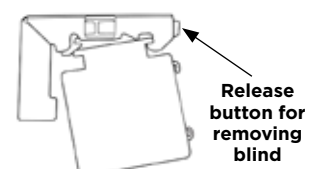

Operating the Roman Blind

TO LOWER BLIND

Pull cord towards the centre of blind until the cord lock releases. Gently feed cord upwards until the blind is at the desired height then move cord towards the pull cord mechanism and release. The cord lock will engage.

TO RAISE BLIND

Pull cord downwards until the blind reaches the desired height, gently release the cord and the blind will lock automatically.


Note: Do allow approximately two weeks for the fabric settling out process.

Child Safety Instructions

For Blinds With Cord Control

Warning

- The cord cleat must be fitted to ensure child safety and to comply with regulations.
- The cleat is to be positioned at least 1600mm above floor level, as a child is capable of unwinding a cord from a cleat.
- Use two screws to attach each cleat to the wall. Do not use tape or glue to attach the cleat.
- Installed cleat must be able to withstand a 7 Newton load for 10 seconds in all directions.
- Wrap excess cord around the cleat every time the blind is raised/lowered, to prevent child strangulation.
- The cord must not form a loop longer than 220mm and should be wound entirely around the cleat every time.

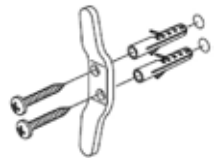

WARNING - ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

- A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed.
- If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain.
- If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.